



Den Braven



Joint dimensions, joint construction and use of backer rod

Technical Bulletin TB122013-001



KNOWLEDGE



EDUCATION

BETTER RESULTS
THROUGH
KNOWLEDGE

Joint dimensions, joint construction and use of backer rod

Joint structures are used in both the interior and exterior of buildings.

These include:

- Joints, eg, between frame / wall
- Expansion joints, eg, between concrete slabs

These joints are knowingly placed in the structure in order to absorb expansion and contraction. The joints become narrower and wider by operation of the structure in which they are located. This effect may be caused by:

1. Vibrations caused by traffic loads, machines;
2. Deflection of the structure by wind load;
3. Expansion and contraction of building materials by contracting and extracting moisture;
4. Expansion and contraction of building materials by temperature changes (thermal expansion and contraction).

While designing the building, these operations will be taken into account, and both the length as the width of structural parts of the joints will be chosen in such a way as not to overload the seal material. Although the causes mentioned under 1, 2 and 3 can, under certain circumstances, exert a significant effect on the joints, in most cases, the greatest effects are caused by thermal expansion and contraction of the materials.

This is how it works

All materials have their own specific expansion co-efficiency that is found in technical manuals or is be specified by suppliers. Table 1 lists various materials and their indicated expansion co-efficiency. This shows the large differences between the expansion co-efficiencies of the various materials. For instance plastics expand 8 to 10 times more than glass. For more expansion co-efficiencies see Table 1.

In the right column of table 1 the extraction / contraction of material is listed. These values account for a length of 1 meter and a temperature difference of 100°C. Using this data the expansion / contraction for specific construction parts can be calculated, allowing for differences in temperature.

Example

Based on a concrete slab of 5 meters length, the maximum temperature of which is + 30°C , with a minimum of - 10°C. The difference in temperature is 40°C.

- 1 meter concrete / 100° temp. difference = 1,2 mm operation
- 5 meter concrete / 100° temp. difference = 6,0 mm operation
- 5 meter concrete / 40° temp. difference = 2,4 mm operation


The calculated operation is 2,4 mm. This force will also be present in the joint. By sealing the joint with an elastic sealant which durably allows max. 25% deformation, the minimal width of the joint is: $(100/25) \times 2,4 \text{ mm} = 9,6 \text{ mm}$. Both the correct width and depth of the joint are important. The depth depends on the width and is calculated by using the formula below.

$$\text{joint depth} = (\text{joint width}/3) + 6 \text{ mm}$$

So with a joint width of 18 mm the right joint depth is: $(18/3) + 6 \text{ mm} = 12 \text{ mm}$



To apply the sealant with the correct depth, a backer rod is used (see drawing)

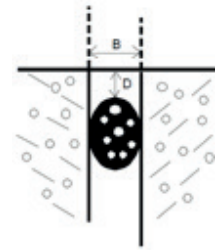

Materials used as backer rods should be weaker than the sealant itself and not obstruct the movement of the sealant, whilst compressing or expanding. Most suitable backer rods are:

- Zwaluw PU Backer rod (open cells)
- Zwaluw PE Backer rod (closed cells)

The rounded shape of the foam creates a good dimension of the joint. Relatively large bonding surface compared to the thinner layer in the middle of the sealant-joint. PU Backer rod is used in non-mechanical joints, or joints unexposed to water (for example façade joints).

PE Backer rod is used in mechanical or joints exposed to water.

The use of PE Backer rods is more critical than PU Backer rods. Damages to PE Backer rods during application in the joints can release propellant, which can cause blistering in the sealant joint. If air is locked between the rod and the sealant, direct sunlight could cause blisters.

Backer rods of wooden battens, rubber hoses, 1-component polyurethane foam, etc. are not suitable for expansion joints. Polystyrene foam is less suitable, especially when bonding primer is applied to the joint. The polystyrene can be dissolved by the primer.

When the depth of the joint is too small to use a backer rod, self-adhesive PE foam tape can be used, or a PE foil. The cured sealant will not bond to Polyethylene, preventing bonding to 3 surfaces, allowing the sealant to move freely in the joint.

MATERIAL	Linear extraction coefficient per °C	Extraction of 1 meter material with a temperature difference of 100°C
Marble	5×10^{-6}	0,5 mm
Wood	5×10^{-6}	0,5 mm
Brick	7×10^{-6}	0,7 mm
Glass	8×10^{-6}	0,8 mm
Stone	8×10^{-6}	0,8 mm
Concrete	12×10^{-6}	1,2 mm
Aerated concrete	12×10^{-6}	1,2 mm
Limestone	12×10^{-6}	1,2 mm
Steel	12×10^{-6}	1,2 mm
Aluminium	24×10^{-6}	2,4 mm
Polyester (fiberglass reinforced)	30×10^{-6}	3,0 mm
Polyester	80×10^{-6}	8,0 mm
PVC	80×10^{-6}	8,0 mm
PMMA (polyacrylate)	80×10^{-6}	8,0 mm
Polycarbonate	80×10^{-6}	8,0 mm

Disclaimer

All information in this document and in all our other publications (including electronic ones) is based on our current knowledge and experience and is the exclusive (intellectual) property of Den Braven. No part of this document may be copied, shown to third parties, reproduced, communicated to the public or used in any other way without Den Braven's written consent. The technical information in this document serves as an indication and is non-exhaustive. Den Braven is not liable for any damage, either direct or indirect, due to (editorial) errors, incompleteness and/or incorrectness of this document. This includes, but is not limited to, incompleteness and/or incorrectness due to technological changes or any research conducted between the date of publication of this document and the date on which the product is acquired. Den Braven reserves the right to amend the wording of this document. Den Braven cannot be held liable for any damage, either direct or indirect, due to the use of the product depicted in this document. The user must read and understand the information in this document and other documents relating to the products prior to the use of the product. The user is responsible for performing all the requisite tests to make sure that the product is suitable for its intended use. We have no influence in what way the product is applied and/or any circumstances relating to events occurring during storage or transport and therefore we do not accept any liability for damage. All deliveries are made exclusively in accordance with our general terms of conditions which have been filed at the Dutch Chamber of Commerce.